



1. Establish a door style, eg 'Blickling'
2. Choose the panel type, eg 'Yare'


1. Classic door styles




Barton

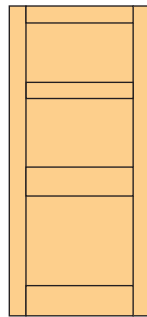


Briston

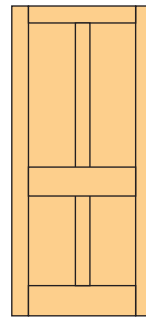


Brandon

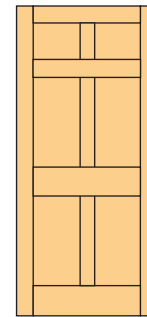


Blickling




Bircham

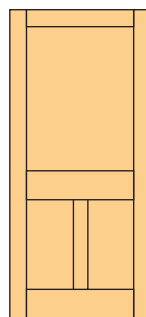

Burnham

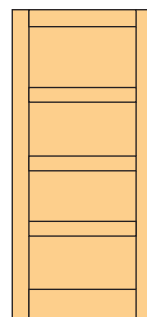

Brampton

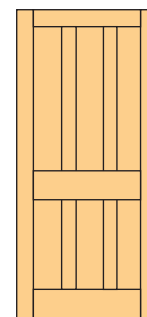

Brancaster

2. Panel types

There are two basic types of panel construction available:

The Wensum



A raised and fielded panel which may be set within moulded stiles, rails and muntins.




Also available in conjunction with non-moulded members, set within a range of applied bed or bolection mouldings.

The Yare




A flat panel with a veneer or laminate facing, set within a range of applied bed or bolection mouldings.

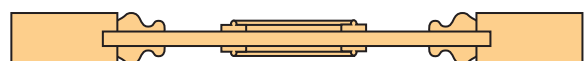

The panel may also be embellished with the addition of panel beads or applied relief panels.

3. Select moulded profile from 1 to 4 (n.b. 1 will be offered as standard)
4. Only select applied door mouldings a to r where profiles 1 to 4 are not appropriate (n.b. These will be square shouldered profile)
5. Where panel beads are desired, select from s to v.


3. Moulded stiles, rails and muntin profiles

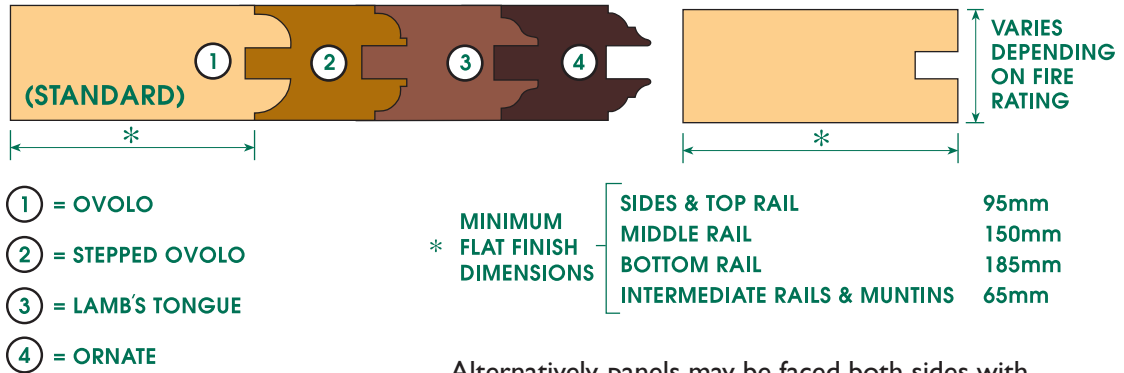


Alternatively, panels may be faced both sides with tongue and grooved boarding to finish flush with perimeter stiles and rails.

4. Applied door mouldings

Bed mouldings

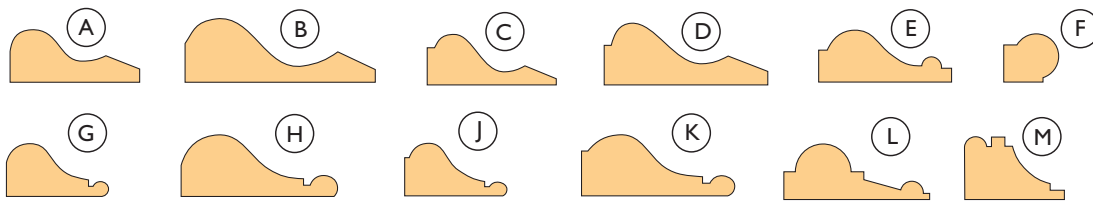

Bolection mouldings

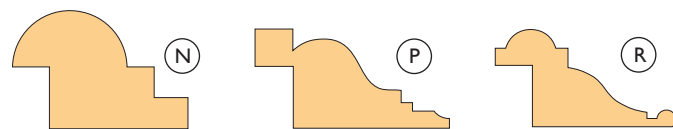

5. Panel beads



Please note that we are not limited to the examples shown on these pages.

We shall be pleased to discuss your more specific design requirements.